



ORIGINAL WIRING

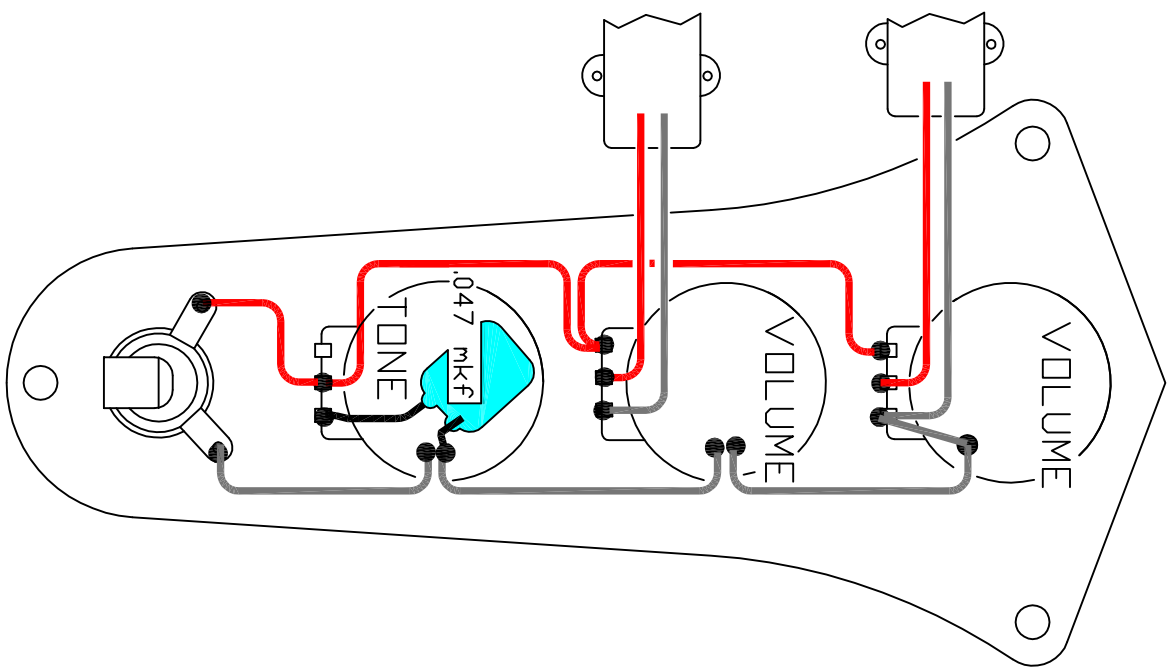


STEP 1

CHANGING TWO VOLUME POTS FOR ONE DUAL CONCENTRIC

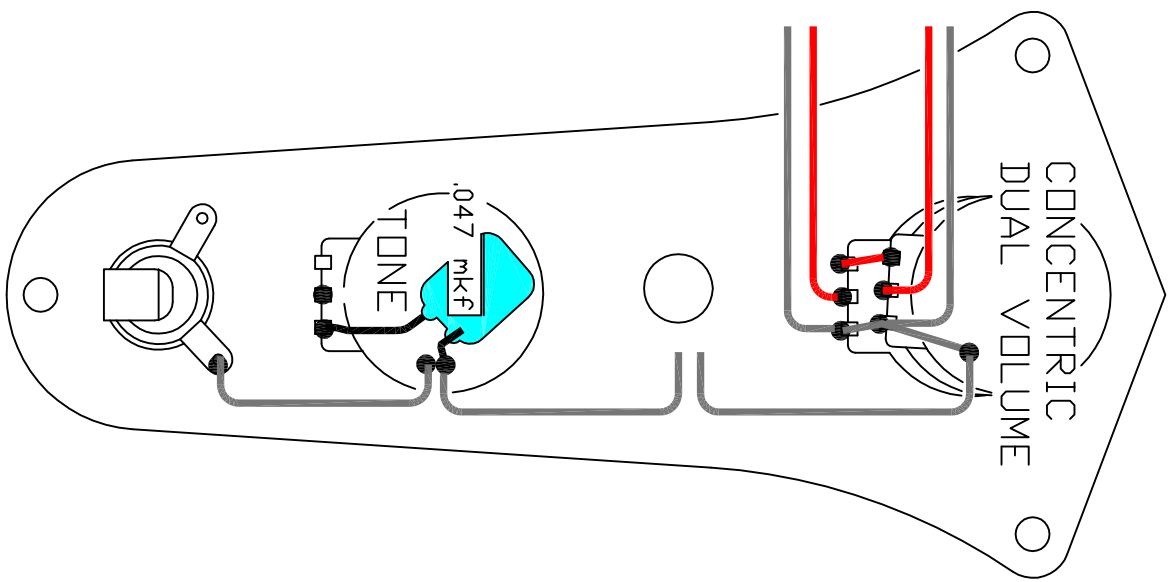

STEP 2

INSTALLING RTB

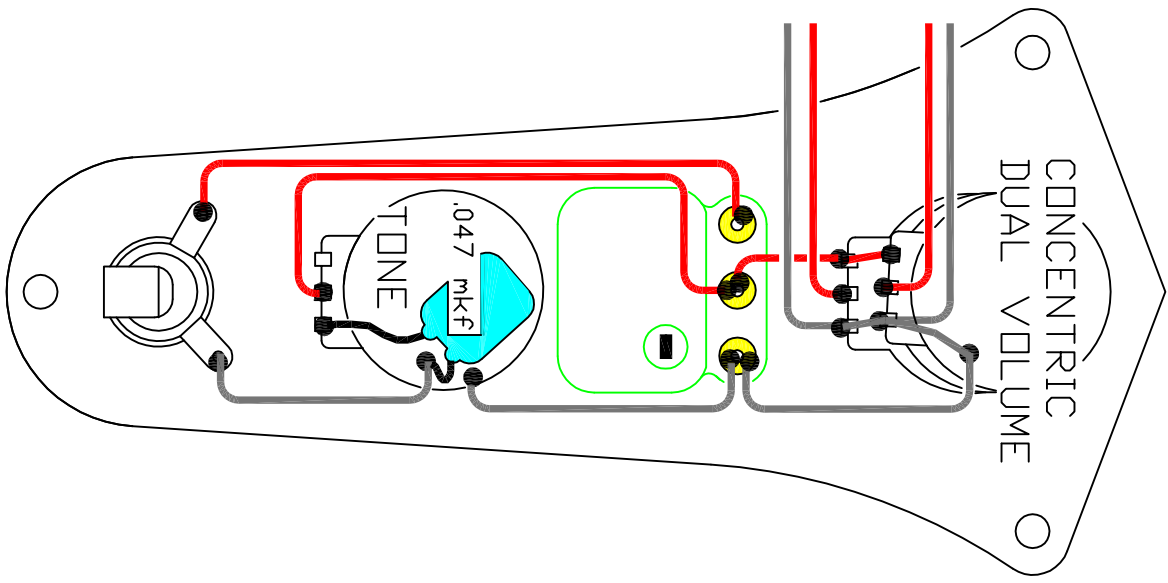

STEP 3